



# WE International, Inc.


POST OFFICE BOX 97 • SYRACUSE, INDIANA 46567 USA  
PHONE: (219) 457-3066 • FAX: (219) 457-8807  
email: weexport@we-intl.com • <http://www.we-intl.com>

## Installation Sheet

### Perimeter Insulation on Outside of Foundation

#### With rFoil Concrete Barrier

- Quick, easy and safe to install
- Replaces 2" foam board insulation
- 100% vapor proof - creates a vapor barrier
- Greatly reduces basement dampness
- Unaffected by moisture and humidity

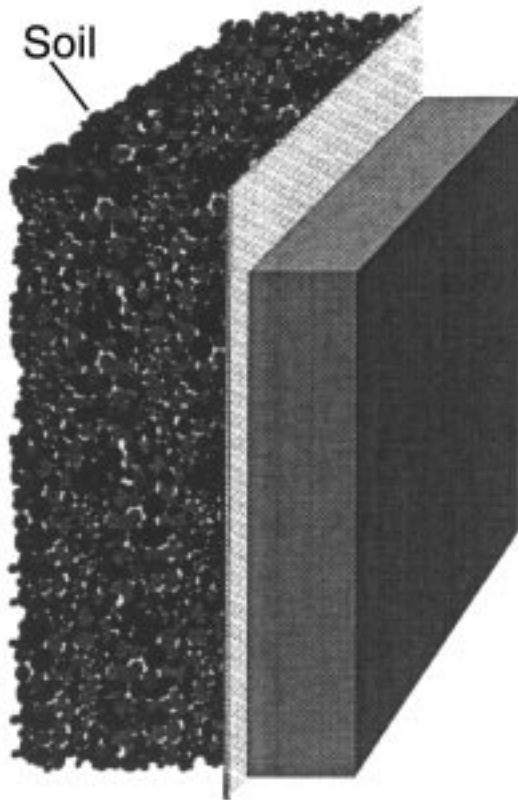

- 1) Unroll *rFoil Concrete Barrier* horizontally on the outside of the foundation.
- 2) Secure to foundation using fasteners or adhesives.
- 3) Seal all seams with 2" or 3" vinyl tape (All tape should be applied using a flat edge taping tool to ensure good adhesion).
- 4) Backfill soil as usual.