



WE International, Inc.


POST OFFICE BOX 97 • SYRACUSE, INDIANA 46567 USA
PHONE: (574) 457-3066 • FAX: (574) 457-8807
email: weexport@we-intl.com • <http://www.we-intl.com>

Installation Sheet

Residential Housewrap

With No-Tear Radiant Barrier PERF or SOLID

- Ideal housewrap for residential construction
- Quick and easy to install
- Provides reflective insulation for radiant heat loss/gain
- Serves as standard wind block already used on all new construction
- Solid No-Tear serves as a moisture & vapor barrier
- Blocks up to 97% of radiant heat
- Unaffected by moisture and humidity

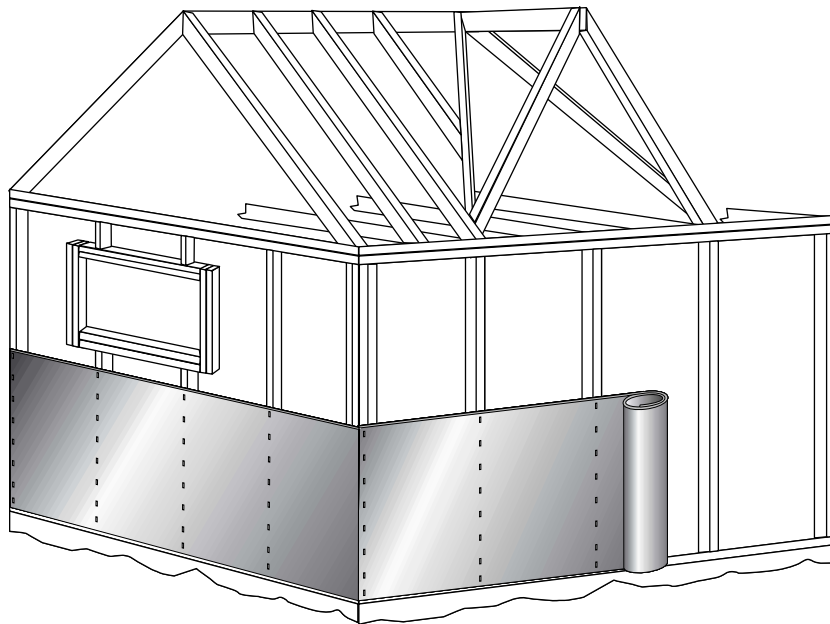

1) Unroll No-Tear Radiant Barrier horizontally around perimeter of house. Use same methods for installing regular housewrap. Staple in place every 12" - 18".

2) Cut out any holes for doors and windows.

3) If you are using No-Tear SOLID, seal all seams with 2" Reflective Foil Tape (All tape should be applied using a flat edge taping tool to ensure good adhesion). You should be using No-Tear SOLID, only if building codes require a vapor barrier on the exterior of the house (warm weather climates only).

If you are using No-Tear PERF, reflective tape is not necessary. Use No-Tear PERF if a vapor barrier is required on the interior of the house. Using No-Tear SOLID in this type of application can result in vapor lock.

4. Attach siding or bricks using usual method. If possible, leave an airgap between the bricks and the No-Tear.