



# WE International, Inc.


POST OFFICE BOX 97 • SYRACUSE, INDIANA 46567 USA  
PHONE: (219) 457-3066 • FAX: (219) 457-8807  
email: weexport@we-intl.com • <http://www.we-intl.com>

## Installation Sheet

# Concrete/Masonry Walls

## Warm Climate Installation

- Quick, easy and safe to install
- Provides reflective insulation for radiant heat loss or gain
- Reflects up to 97% of radiant heat
- Adds R-9.8 to wall system
- 100% vapor proof - creates a vapor barrier
- Unaffected by moisture and humidity

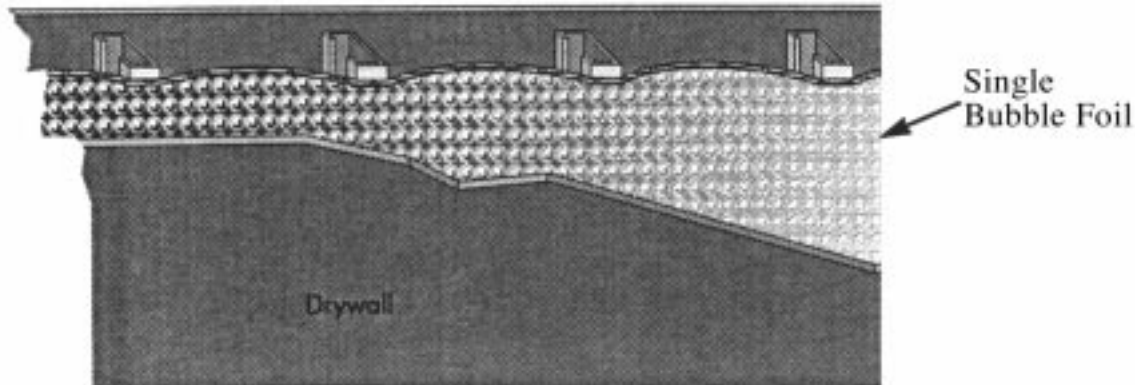

(It is important to remember that rFoil works best when there is at least a 1" airspace between rFoil and another material, like concrete or OSB. Since it's important to block heat entering a building or house, the 1" airspace should be closest to the outside).

- 1) Fasten furring strips to the wall using normal installation methods.
- 2) Tack rFoil horizontally to furring strips, using staples. Pull it tight along the wall.
- 3) Seal all seams with 2" Reflective Foil Tape (All tape should be applied using a flat edge taping tool to ensure good adhesion).
- 4) If you live in a temperate climate, fasten furring strips over rFoil insulation using normal installation methods. This will give an airspace on both sides of the foil, and block heat in both directions.
- 5) Attach drywall or paneling as usual. The fasteners will also hold rFoil in place.