



WE International, Inc.


POST OFFICE BOX 97 • SYRACUSE, INDIANA 46567 USA
PHONE: (219) 457-3066 • FAX: (219) 457-8807
email: weexport@we-intl.com • <http://www.we-intl.com>

Installation Sheet

Residential Homes

Ceiling Applications

- Used by itself or in conjunction with mass insulation
- Quick, easy and safe to install
- Provides reflective insulation for radiant heat loss or gain
- Reflects up to 97% of radiant heat
- Adds R-14.3 to ceiling system
- 100% vapor proof - creates a vapor barrier
- Unaffected by moisture and humidity

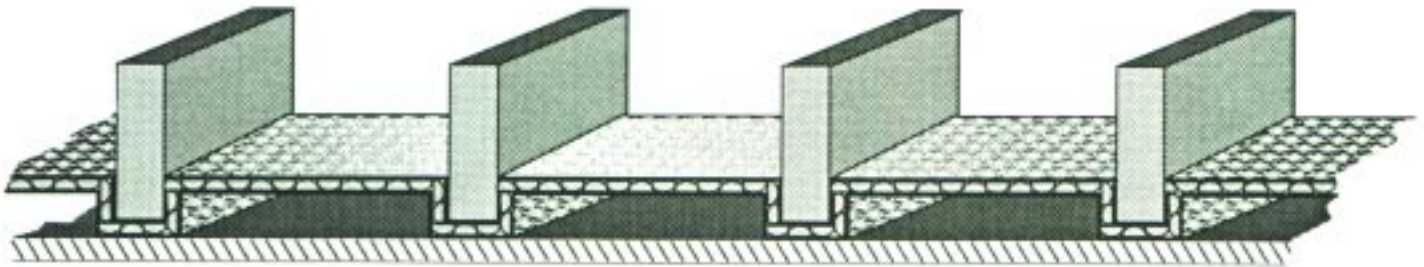

- 1) Staple leading edge of rFoil to end truss/rafter and then again on the side of the truss/rafter as in illustration.
- 2) Wrap foil around the truss/rafter, stapling it to the edge to tack it into place. Continue around to the other side, as shown in the installation.
- 3) Continue to staple rFoil along the roofline, ensuring that the Foil is recessed into the cavity to provide at least a 1" space on either side.
- 4) Seal all seams with 2" Reflective Foil Tape (All tape should be applied using a flat edge taping tool to ensure good adhesion).
- 5) Attach drywall or paneling using usual method.