



WE International, Inc.


POST OFFICE BOX 97 • SYRACUSE, INDIANA 46567 USA
PHONE: (574) 457-3066 • FAX: (574) 457-8807
email: weexport@we-intl.com • <http://www.we-intl.com>

Installation Sheet

Residential Homes

Wall Application

- Used by itself or in conjunction with mass insulation
- Quick, easy and safe to install
- Provides reflective insulation for radiant heat loss or gain
- Adds R-9.8 to wall system as determined by ASTM C236 Hot Box test
- 100% vapor proof - creates a vapor barrier
- Unaffected by moisture and humidity

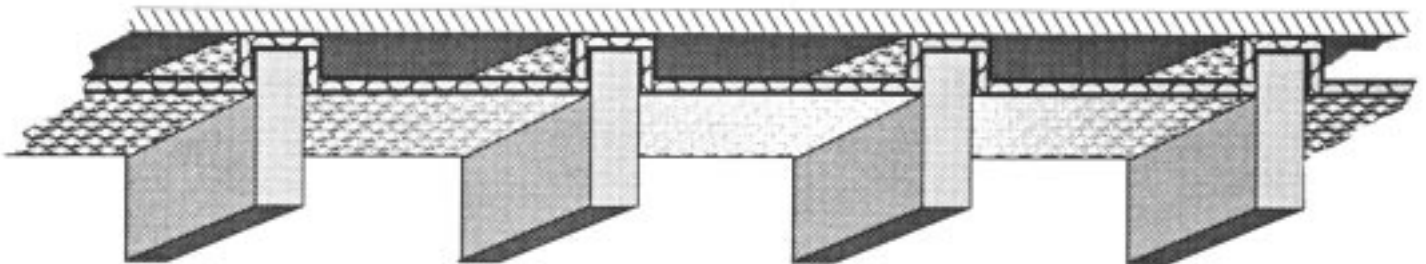

- 1) Unroll rFoil Reflective Insulation horizontally along the wall. Regular bulk insulation should already be in place. If you are using kraft-faced fiberglass, put 2 or 3 - 6" cuts into the kraft paper to prevent vapor lock.
- 2) Staple edge to corner stud and then again on the side of the stud, as shown in the illustration above.
- 3) Wrap rFoil around the stud, stapling it to the edge to tack it into place. Continue around to the other side, as shown in the illustration.
- 4) Continue to staple rFoil along the wall, making sure that it is recessed into the wall cavity to provide at least a 1" space on either side.
- 5) Seal all seams with 2" Reflective Foil Tape (All tape should be applied using a flat edge taping tool to ensure good adhesion).
- 6) Attach drywall or paneling using usual method.