



WE International, Inc.


POST OFFICE BOX 97 • SYRACUSE, INDIANA 46567 USA
PHONE: (219) 457-3066 • FAX: (219) 457-8807
email: weexport@we-intl.com • <http://www.we-intl.com>

Installation Sheet

Under Carpet

With rFoil Concrete Barrier/Single Bubble Poly/Double Bubble Poly

- Eliminates basement dampness
- Increases comfort
- Quick and easy to install
- Excellent vapor and radon barrier
- Keeps floor warm

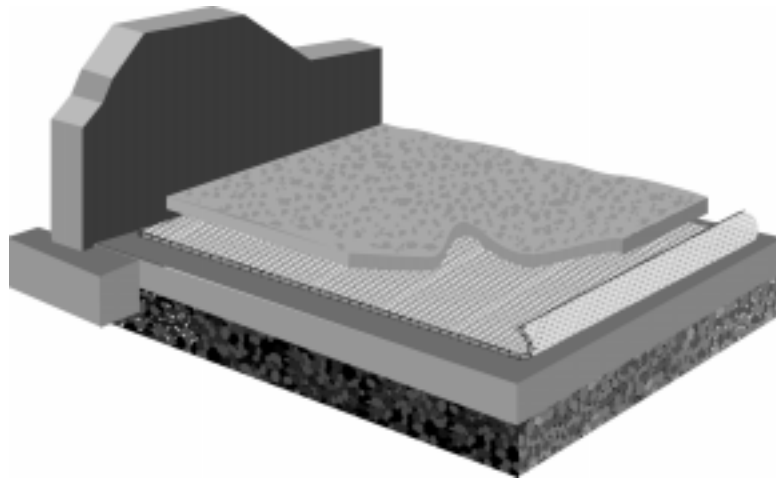

Thermal Value: - Equivalent to R-10 for the assembly
- Tested with thermography method

- 1) Unroll rFoil over concrete floor. If using Single Bubble Poly or Double Bubble Poly, install white poly facing the ground and aluminum side up.
- 2) Seal the seams with regular foil tape (2" wide). (All tape should be applied using a flat edge taping tool to ensure good adhesion).
- 3) Install the carpet as usual.