



WE International, Inc.


POST OFFICE BOX 97 • SYRACUSE, INDIANA 46567 USA
PHONE: (574) 457-3066 • FAX: (574) 457-8807
email: weexport@we-intl.com • <http://www.we-intl.com>

Installation Sheet

Radiant Floor Heating Under/Between Wood Joists

With rFoil Single Bubble Foil

- Quick, easy and safe to install
- Helps radiate heat in required direction
- Increases the heating system efficiency
- Reduces installation time and labor over alternative insulations
- 14.3 R-Value as determined by ASTM C236 Hot Box test

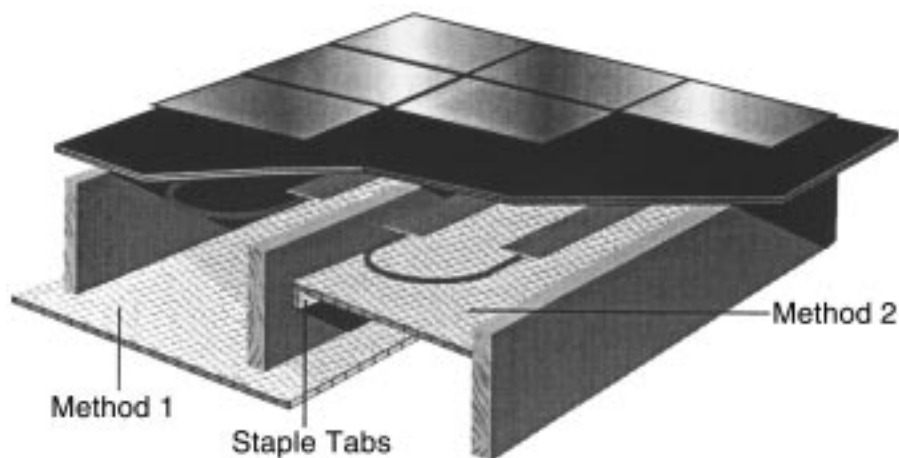

Installation Method 1:

- 1) Unroll & staple 48" wide *Single Bubble Foil* under floor joists. Use 1/2" - 3/4" staples for best performance.
- 2) Seal the seams with 2" foil tape (All tape should be applied using a flat edge taping tool to ensure good adhesion).

Installation Method 2:

- 1) Use 16" *Single Bubble Foil w/ Staple Tabs* (or cut 48" wide *Single Bubble Foil* into 16" strips). Insert the material between the joists, 2" - 4" below heating elements, or as recommended by the manufacturer's instructions. For optimal performance, there should be no contact between the rFoil and the heating elements.
- 2) Staple to the joists.
- 3) Seal butt joints with 2" foil tape.